

## Aktualisierung

Die neusten Versionen der Software / des Treibers und der technischen Anleitung laden Sie bitte aus dem Internet:

Cybermouse: [www.cybermouse.de](http://www.cybermouse.de)


BasicCard: [www.basiccard.com](http://www.basiccard.com)

## Update

Download from the internet the latest version of driver / software and manual:

Cybermouse: [www.cybermouse.de](http://www.cybermouse.de)

BasicCard: [www.basiccard.com](http://www.basiccard.com)

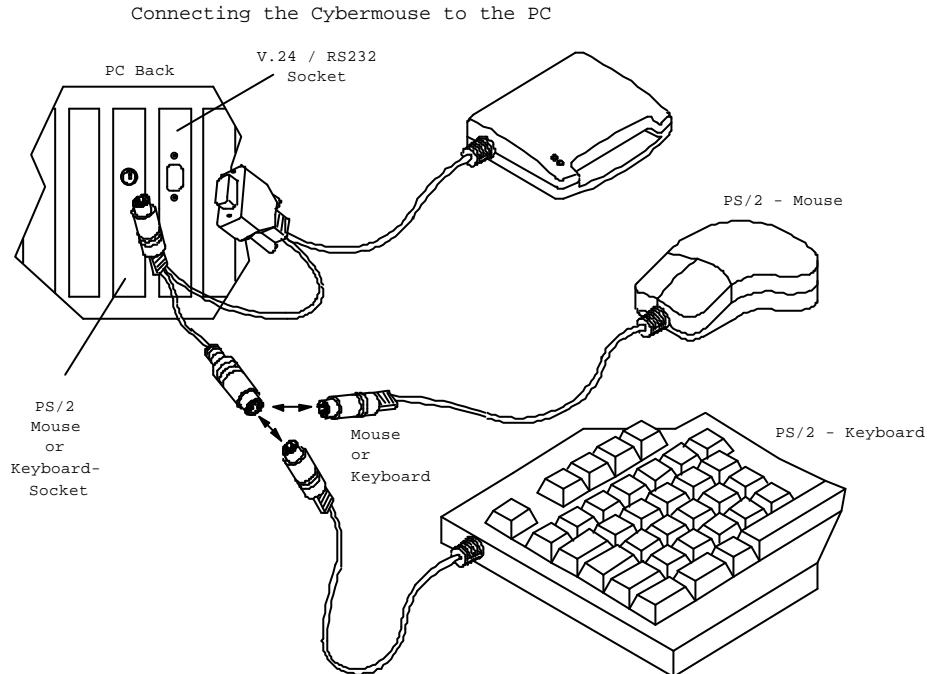

# How to start

## 1. Install the CyberMouse card reader

- Shutdown and switch off your PC.
- Connect the serial plug of the CyberMouse card reader to a free serial connector at the backside of your PC.
- Remove either the connector of your PS2 mouse or your PS2 keyboard from your PC connector.
- Connect the male PS2 plug (small round one) of your CyberMouse card reader to the PS2 connector at the backside of your PC (the one you have released before).
- Connect the PS2 mouse or PS2 keyboard (depending on which one you have removed) to the female PS2 plug of your CyberMouse card reader.
- Switch on your computer

See also graphic on second sheet or the backside of this sheet for how to connect your CyberMouse card reader.

Note: For using the BasicCard development kit, there is no requirement to install the Microsoft PC/SC components and/or PC/SC drivers for CyberMouse card reader. So as long as there is no other requirement for this, we strongly recommend not to install any driver for the CyberMouse card reader.

## 2. Install the BasicCard development kit

- Insert the ZeitControl CD included with the development kit into your CD ROM drive.
- Wait for program to start up. If no program starts up automatically, double click the symbol of your CD ROM drive, or select AutoPlay for your CD ROM drive by use of right mouse button when using Explorer.
- Choose your language.
- Choose „BasicCard“
- Select „Installation development tools V3.03“ („Installation der Entwicklungstools“ if you have chosen German language). Follow the setup instruction.  
Note: We strongly recommend to install to the default directory and not to change the target directory.
- After successful installation you can select „Start“, „Programs“, „BasicCard“, „BasicCard Manual“ to find the latest manual. If you cannot read Microsoft Word files, you can either install WordViewer from CD (\Word View\Install) or use Acrobat PDF manuals from CD (\basiccard\doc). There is also a Acrobat reader included on the CD (\Reader\Install).
- We strongly recommend to read this manual carefully, before working with the development tools and cards. Please also take a look at the example files (c:\basiccard\examples\).
- Before installing and using further components like API, you should have understood and successfully used the BasicCard development kit as described above.

## 3. Solving problems

- Please first take a look at our web-site <http://www.basiccard.com>. Select „Free Download“ and then select „FAQ“. Here your problem may already have been described and solved.
- If you have problems accessing your reader download the „Card reader help“ utility from „Free Download“ area at <http://www.basiccard.com>.
- If all steps above fails to solve your problem send an email with detailed description of your problem, the operating system you use (e.g. Windows 98) and the version of development kit (e.g. 3.03) you use to [development@zeitcontrol.de](mailto:development@zeitcontrol.de).

## 4. Updating your development tools

- The latest version of our development software is always available from „Free Download“ area at <http://www.basiccard.com>.